




## CUSTOM FOOT PEGS

Please read and understand these instructions completely before installation to avoid any possible injury to yourself or the motorcycle and/or accessory.

**NOTE: INSTALLATION SHOULD BE PERFORMED ONLY BY QUALIFIED PERSONNEL.**

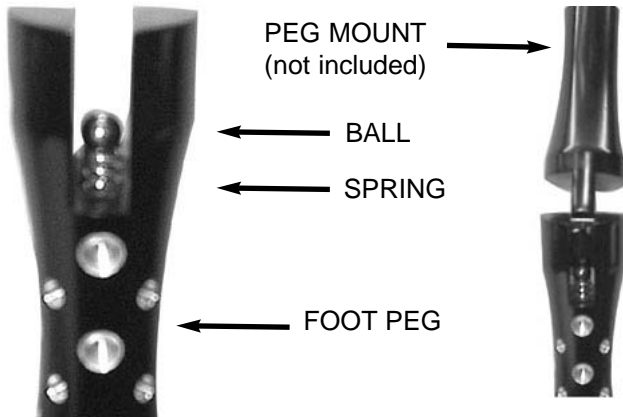

### INSTALLATION:

1. Insert the Spring into the foot peg as shown\*.
2. Place the Ball on top of the Spring\*.
3. Compress the Ball and Spring with the Footpeg Mount (not included) and, using Loctite, fasten with the Shoulder Bolt and Barrel Nut (included with Peg Mount)\*.
4. Install the Peg Mount to the motorcycle with the mounting hardware included with Peg Mount\*.

**\*NOTE: ALL NECESSARY HARDWARE IS INCLUDED WITH PEG MOUNT (SOLD SEPARATELY).**


**IF YOU NEED ASSISTANCE WITH THIS PRODUCT CONTACT PRO-ONE AT: 800-884-4173**



## CUSTOM FOOT PEGS

Please read and understand these instructions completely before installation to avoid any possible injury to yourself or the motorcycle and/or accessory.

**NOTE: INSTALLATION SHOULD BE PERFORMED ONLY BY QUALIFIED PERSONNEL.**

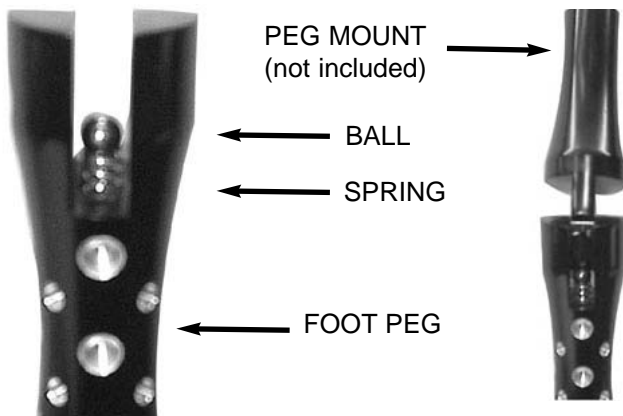

### INSTALLATION:

1. Insert the Spring into the foot peg as shown\*.
2. Place the Ball on top of the Spring\*.
3. Compress the Ball and Spring with the Footpeg Mount (not included) and, using Loctite, fasten with the Shoulder Bolt and Barrel Nut (included with Peg Mount)\*.
4. Install the Peg Mount to the motorcycle with the mounting hardware included with Peg Mount\*.

**\*NOTE: ALL NECESSARY HARDWARE IS INCLUDED WITH PEG MOUNT (SOLD SEPARATELY).**

**IF YOU NEED ASSISTANCE WITH THIS PRODUCT CONTACT PRO-ONE AT: 800-884-4173**